

OSMO

DISCLAIMER AND SAFETY GUIDELINES

V1.0 2015.09



Disclaimer and Warning

Congratulations on purchasing your new DJI product. The information in this document affects your safety and your legal rights and responsibilities. Read this entire document carefully to ensure proper configuration before use. Failure to read and follow instructions and warnings in this document may result in serious injury to yourself or others, damage to your DJI product, or damage to other objects in the vicinity. This document and all other collateral documents are subject to change at the sole discretion of DJI. For up-to-date product information, visit <http://www.dji.com> and click on the product page for this product.

By using this product, you hereby signify that you have read this disclaimer and warning carefully and that you understand and agree to abide by the terms and conditions herein. You agree that you are solely responsible for your own conduct while using this product, and for any consequences thereof. You agree to use this product only for purposes that are proper and in accordance with all applicable laws, rules, and regulations, and all terms, precautions, practices, policies and guidelines DJI has made and may make available.

DJI accepts no liability for damage, injury or any legal responsibility incurred directly or indirectly from the use of this product. The user shall observe safe and lawful practices including, but not limited to, those set forth in this document.

Glossary

The following terms are used throughout the product literature to indicate various levels of potential harm when operating this product:

⚠ WARNING WARNING: Failure to properly follow procedures may result in property damage, collateral damage, and serious or superficial injury.

⚠ CAUTION CAUTION: Failure to properly follow procedures may result in property damage and serious injury.

⚠ NOTICE NOTICE: Failure to properly follow procedures may result in property damage, a small possibility of injury, or no possibility of injury.

⚠ WARNING

Read the user manual

to become familiar with the features of this product before operating. Failure to operate the product correctly can result in damage to the product, personal property, and cause serious injury.

This is a sophisticated product. It must be operated with caution and common sense and requires some basic mechanical ability. Failure to operate this product in a safe and responsible manner could result in injury or damage to the product or other property.

This product is not intended for use by children without direct adult supervision. Do not use with incompatible components or alter this product in any way outside

of the documents provided by SZ DJI TECHNOLOGY CO., LTD. These Safety Guidelines contain instructions for safety, operation and maintenance. It is essential to read and follow all of the instructions and warnings in the user manual, prior to assembly, setup or use, in order to operate the product correctly and avoid damage or serious injury.

Before You Begin

The following documents have been produced to help you safely operate and make full use of your Osmo:

In the Box

Osmo Disclaimer and Safety Guidelines

Osmo Intelligent Battery Safety Guidelines

Osmo Quick Start Guide

Osmo User Manual

Check that you have all of the included parts listed on “In the Box”. Read the entire user manual and watch the tutorial videos on the product page of the official DJI website (<http://www.dji.com/product/osmo>). Read the Disclaimer and Warning above to understand your legal rights and responsibilities. If you have any questions or problems during the installation, maintenance or use of this product, please contact DJI or a DJI authorized dealer.

Install the DJI GO App

Search “DJI GO” on the App Store or Google Play and install the app to your mobile device.



DJI GO supports iOS 8.0 (or later) and Android 4.1.2 (or later).

Safety Guidelines

CAUTION

1. Intricate components inside the Osmo may be damaged upon impact and cause the gimbal to malfunction.
2. Ensure there is nothing obstructing the gimbal when the Osmo is powered on.
3. When unlocking the gimbal, be sure to unlock the tilt motor prior to unlocking the roll motor, or else the lens may become damaged.
4. When locking the gimbal, be sure to lock the roll motor prior to locking the tilt motor, or else the lens may become damaged.
5. The Osmo is not water resistant. Do not use any liquid cleansers. Only use a soft dry cloth to clean the Osmo.
6. Keep the Osmo away from sand and dust to safeguard the sensors in the camera and motors.

NOTICE

1. Hold the Osmo still when it is powering up

to ensure it starts up successfully.

2. Check the camera settings before starting to shoot.
3. DO NOT remove the Micro SD card from the camera when the Osmo is powered on.

This content is subject to change.

Download the latest version from
www.dji.com/support



If you have any questions about this document, please contact DJI by sending a message to DocSupport@dji.com.